

micropets™

マイクロペット

Your Smart, Pocket-Sized Petbot

Instruction Manual

TAKARA TOMY



4+

GEN2

Kitten, Axolotl, Puppy
Bear (Graffiti Bear)
Bear (Techy Bear)
Bear (Candy Bear)

WITH BATTERIES
(3 LR44 BUTTON-TYPE INCLUDED)

● Photographs and illustrations may differ slightly from the actual product.




Thank you very much for purchasing the TAKARA TOMY 'Micropets'. Please read the Quick Start Guide and this instruction manual carefully before use. Please ensure you keep these documents in a safe place once you have finished reading them.

You can watch the How To Play Video here!

<https://www.takaratomy.co.jp/products/micropets/startguide/>

*Data charges and other costs are the responsibility of the customer.
*Please ensure that a parent or guardian connects the device to the internet.
*The linked website may be changed or removed without prior notice.

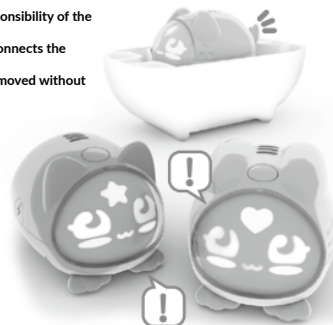

Contents of the Set

- Micropets... 1
- Instruction manual...1
- Quick Start Guide...1
- Potty (for toilet function)...1



©2024 The Moose Group
© TOMY

株式会社 タカラトミー
〒124-8511 東京都葛飾区立石 7-9-10

タカラトミーでは「子どもたちに安全で楽しいおもちゃと夢を」を第一に考えております。そのため、常に製品に対し研究、改良を行っており、お買い上げ時期によって同一製品の中にも多少異なるものや、パッケージの写真やイラストなどと異なる場合がございますがご了承ください。製品につきましては、万全の注意を払って製造に当たっておりますが、万一お気付きの点ございましたら下記までご連絡ください。

タカラトミーグループ お客様相談室 おかけ間違いのないようご注意ください

製品の修理などについては下記お客様相談室までお問い合わせください
0570-041031 電話受付時間 10～17時
月曜日～金曜日（土日・祝日を除く）
本製品のお客様サポートは日本国内での購入かつ日本国内からのお問い合わせに限りです。
(Customer service is only available in case this product purchased in Japan and inquired from Japan domestic.)

● 楽しいタカラトミーの情報はインターネットで www.takaratomy.co.jp

© TOMY

Warning

All parents and guardians must read this.


- This product contain small parts. Keep away from small children under 3 years as there is a risk of choking if swallowed.
- Please read this instruction manual carefully before use and store in a safe place after reading.
- Dis pose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.
- Batteries must be replaced by a parent or guardian.
- In very rare cases, some people may experience temporary deterioration of vision or dizziness when exposed to strong light or flashing lights. Anyone who has experienced such symptoms must consult a doctor before using this product. Furthermore, anyone who experiences such symptoms whilst using the product should stop using it immediately.
- Do not play with the product near the eyes.
- Do not wrap Micropets's face around anything. There is a risk of eye injury.
- If your vision deteriorates due to strong light or flashing lights, stop using the product immediately. If discomfort persists, seek medical advice.

Caution

- Non-rechargeable batteries are not to be recharged.
- Exhausted batteries are to be removed from the toy.
- Do not mix old, new, or different kinds of batteries together.
- Remove batteries if the product will not be in use for an extended period of time.
- Ensure the positive (+) and negative (-) terminals are correctly aligned. Do not short-circuit, charge, disassemble, hear, or dispose of batteries in fire.
- Follow local regulation when disposing of batteries.
- Keep out of small children under 3 years as there is a risk of accidents.
- Take care not to trap your fingers between the moving parts and the handle.
- Do not throw or swing it.


Batteries

Plastic Tape

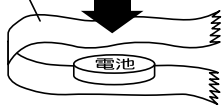

There is a risk of overheating and bursting. Please wrap batteries in tape or similar material when dispose.

You will see the icon on its head flash red when the batteries are low

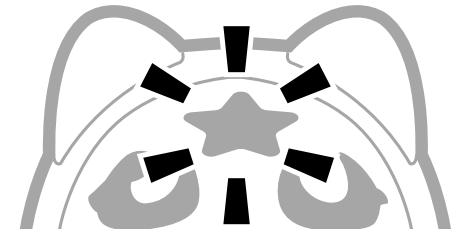

① Loosen the screws on the battery cover on the underside using a + (plus) screwdriver.

② Open the battery cover, carefully check the polarity (+ and -) of the three LR-44 button cells, and insert them correctly.


③ Tighten the screws on the battery cover securely using a + (plus) screwdriver.

* Parent or guardian to carries out the battery replacement.

* If the device response becomes sluggish, the batteries may be running low. Please replace the batteries in such cases.


* The battery cover is secured with screws to prevent the batteries from popping out.

With Batteries (3 LR44 Button-Type)
*Batteries included is for testing purpose.

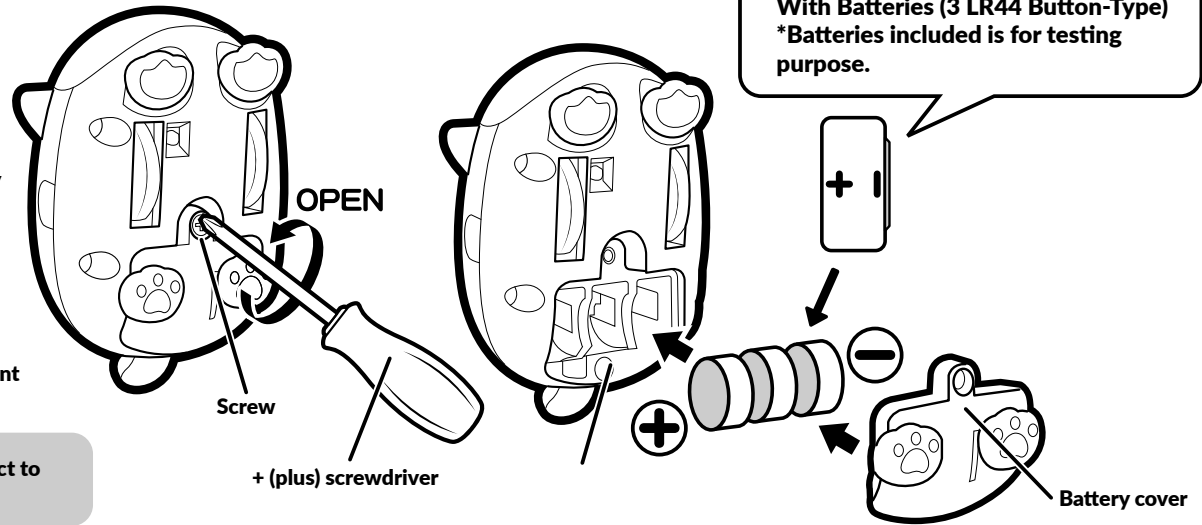


* When reinserting the batteries, use a thin object to press the reset button.

Micropets

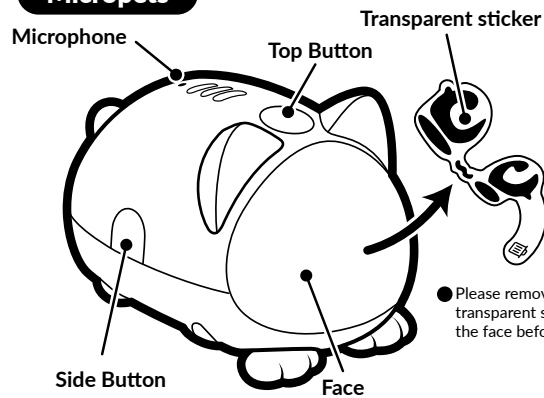


● Please remove the transparent sticker from the face before playing.

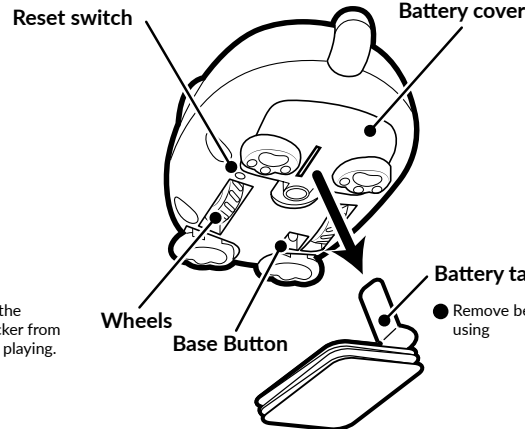

Battery tab

● Remove before using

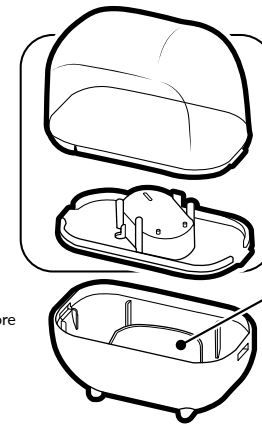

● Keep for toilet function

Level

Micropets call out for 3 main needs “Talko” “Poo Poo” “Chargo”

Make sure to respond to your Micropets!

Correct
Respond

It will react, then do
a celebration sound 🎵



Incorrect
Respond

It will do a failure sound.



- You'll level up as you correctly respond to requests!
- As you level up, you can unlock new expressions and movements!
- The higher the level, the more interactions you'll need to advance?!
- Make sure you respond to their requests properly!

TROUBLESHOOTING

The face has stopped lighting up/it isn't making sounds:

- If you are on a high level, your Pet won't call out as often.
- If you don't respond to your Pet for a while, it will go to sleep. Press any button to wake it up.
- Batteries may be low. Replace with fresh batteries.

I don't want to lose my Level:

- Your current level will be kept when you turn your Pet off.
- Pressing the Reset switch or changing/running out of batteries will result in going to the bottom level.

Pet isn't responding to sound:


- Ensure you speak loud and clear when your Pet isn't making noise/moving.
- Your Pet might be in sleep mode. Press any button to wake it up.

For best performance:

- Don't restrict movement of the wheels.

I put my Pet in the Potty Case but it isn't reacting:

- Ensure your Pet is switched on.
- Ensure your Pet is in the right orientation in the case, and seated fully.

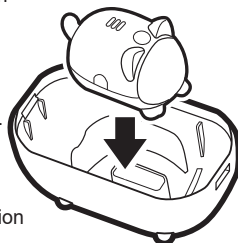

My Pet wants to go Poo Poo but I don't have the Potty:

- Hold down the Base Button on your Pet until it finishes going to the Potty.

My Pet isn't moving:

- There might be something stuck in the wheels of the Pet. Gently try to remove. Don't disassemble the Pet.
- Ensure you are playing on a flat, smooth surface that is indoors.

I can't connect my Pets:

- Ensure the microphones on each Pet are very close to each other. External noise can prevent this from working.
- When connecting, make sure the Pet that you are trying to connect to is not making noise or moving.

WARNING: NOT SUITABLE FOR CHILDREN UNDER 3 YEARS. THIS TOY PRODUCES FLASHES THAT MAY TRIGGER EPILEPSY IN SENSITISED INDIVIDUALS.

CAUTION: OPERATE ON SMOOTH, HARD SURFACE.

IMPORTANT: READ ALL INSTRUCTIONS BEFORE USING THIS TOY. RETAIN PACKAGING DETAILS FOR FUTURE REFERENCE. COLORS AND CONTENTS MAY VARY. RETAIN INSTRUCTIONS FOR FUTURE REFERENCE. REMOVE ALL PACKAGING ATTACHMENTS BEFORE GIVING THIS PRODUCT TO A CHILD.

CONTENTS: 1 ELECTRONIC TOY, 1 CASE (TOY TOILET), 1 INSTRUCTION MANUAL, 3 LR44 BATTERIES.