

micropets™ QUICK START GUIDE

Scan for
HOW TO
video.

PARENTAL CONSENT REQUIRED
BEFORE GOING ONLINE AND
VIEWING ONLINE CONTENT.



TURN ON:
Press top button.



TURN OFF:
Press top and side
buttons



z>z

NEEDS

TALKO!



TALK to me!



POO POO!



Place me on
the **TOILET**.



CHARGO!



CHARGE
me up.



PET ME

Press top
button.



LOW BATTERY

My forehead
icon will
BLINK RED.



CHECK LEVEL

Press bottom
button to show
level color.



LEVEL UP!

Pet me, talk to me, charge me or place me on the toilet multiple times to level up!

このおもちゃは、おもちゃとして使用する必要があります。

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

4+

Unlock SPECIAL FEATURES as you **PLAY!**

When you see the icon turn **WHITE**, press **TOP BUTTON** for a Special Feature



LEVEL 1

LEVEL 2



LEVEL 1 & 2

• Press **TOP BUTTON** when icon is **WHITE** and I **DANCE!**

• **CONNECT** to a friend and we **DANCE TOGETHER!**

LEVEL 3



LEVEL 3

• Press **TOP BUTTON** when icon is **WHITE** and I **RACE!**

• **CONNECT** to a friend and we **RACE TOGETHER!**

LEVEL 4

LEVEL 5



LEVEL 4 & 5

• Press **TOP BUTTON** when icon is **WHITE** and I **SING!**

• **CONNECT** to a friend and we **SING TOGETHER!**

CONNECT

1 Position **FIRST PET** above **SECOND PET** as pictured.



2 Wait for the **SECOND PET** to be idle and **NOT MAKING NOISE**

3 Press and **HOLD** down **TOP BUTTON** on **FIRST PET** firmly...



...until **BOTH PETS** start operating in unison.



Regulation 1908
FCC Logo
Label 710
Consumer Code
The Pet Shop