

micropets™ QUICK START GUIDE



Scan this to
check out more!

**TURN
ON:**


Press top button.



z
z
z

**TURN
OFF:**

Press top and side buttons

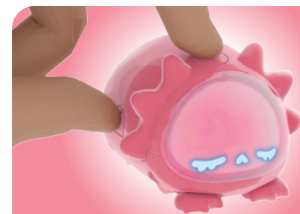

NEEDS

You can check the needs of Micropets by
the light-up icon at their head!

RED

Want to talk

BLUE

Toilet

GREEN

Power Charge

TALKO!



Want
to talk!

TALK to me
Lets chat!



POO POO!



Want to
Poo Poo!

Put me on
the TOILET
please!



CHARGO!



CHARGE
me up!

Want to
power
charge~!



PET ME
Press top button!



LOW BATTERY
My forehead
icon will
BLINK RED!



CHECK LEVEL
Press bottom
button to show
level color!



LEVEL UP!

Pet me, talk to me, charge me or place me on the toilet multiple times to level up!

LEVEL 1



LEVEL 2



LEVEL 1 & 2

● Press TOP BUTTON when icon is WHITE and I DANCE!

CONNECT to a friend and we DANCE TOGETHER!

LEVEL 3



LEVEL 3

● Press TOP BUTTON when icon is WHITE and I RACE!

CONNECT to a friend and we RACE TOGETHER!

LEVEL 4



LEVEL 5



LEVEL 4 & 5

● Press TOP BUTTON when icon is WHITE and I SING!

CONNECT to a friend and we SING TOGETHER!

Fulfilling their requests will level up your Micropets!
You can tell its growth level by the color of its head!

When the marking is glowing white, press the top button.

Press top button to check the fun and exciting movements!?



CONNECT

1

Position FIRST PET above SECOND PET as pictured.



Sending Side

Receiving Side

2

Wait for the SECOND PET to be idle and NOT MAKING NOISE

※Please make sure the power is turned on.



Receiving Side

3

Wait for the Press and HOLD down TOP BUTTON on FIRST PET firmly...



Sending Side

4

...until BOTH PETS start operating in unison.

※Until you hear a sound to connect successfully, please keep BOTH PETS close to each other.



Receiving Side