

Woody

THE SHERIFF

TALKING FIGURE WITH HOLSTER COLLECTOR'S EDITION

55+
PHRASES!

Pull string to hear catchphrases
from the movie!

My name is Woody.

That wasn't flying!
That was...falling with style.

Amigos! We're all amigos.

And more!



PLAY INSTRUCTIONS:

 
How To Play with Woody!

Pull string on Woody's back to hear his signature
sheriff phrases from the movie.

背中
のヒモをひっぱってみてね!
55種以上のセリフをしゃべるよ!
日本語と英語でおしゃべりするよ!



なまえシール入り
Name sticker included

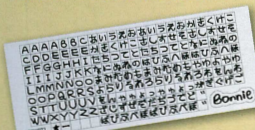


※写真やイラストは商品と異なる場合がございます。ご了承ください。



リアルサイズトーキングフィギュア ウッディ Real Size Talking Figure Woody

電源スイッチの入れ方

 How to Turn On Power Switch

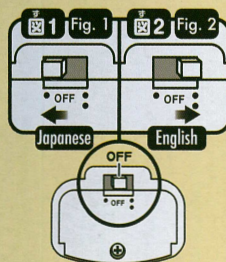

Japanese Mode

 
As shown in Fig. 1, flip the switch and pull the Talk Switch on the back to enable Japanese Mode.

English Mode

As shown in Fig. 2, flip the switch and pull the Talk Switch on the back to enable English Mode.

電池交換のしかた 単4形アルカリ乾電池3本が必要です。

How to Replace the Batteries Requires 3 AAA alkaline batteries.

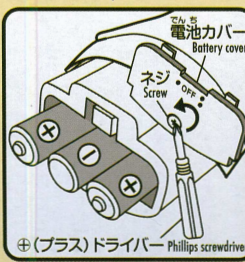

*The included batteries are for testing purposes only. After opening the package, turn off the switch and replace all the batteries with new ones. Remove the fastener on Woody's back to reveal the battery compartment. Pull it out slightly from the back.

Loosen the screw on the battery cover with a Phillips head screwdriver and remove it. Remove the old batteries and insert the new batteries correctly, making sure to match the + (positive) and - (negative) terminals, as shown in the left figure. After inserting the batteries, securely fasten the battery cover with the screwdriver.

*Do not use rechargeable batteries.

電池は別売です。
Batteries not included.

※自立・ポーズの固定は
できません。

* Cannot stand on its
own or hold a pose.

※付属の電池はテスト用です。開封後はスイッチをオフにしたあと、全て新しい電池に交換してください。
ウッディの背中面の面ファスナーをはがすと、電池ケースが現れます。背中から少し引き出してください。
⊕ドライバーでネジをゆるめ、電池カバーを外します。左の図のように、⊕(プラス) ⊖(マイナス) を間違えないように正しくセットしてください。セットした後、電池カバーをドライバーでしっかりと留めてください。
※充電電池は使用しないでください。

205020



4 904810 082088