

# ぷにコミュ

...Punirunes...

対象年齢6才以上

## 取扱説明書

ハローキティのぷにるんず シナモロールのぷにるんず  
クロミのぷにるんず ポムポムプリン のぷにるんず

© 2025 SANRIO CO., LTD. TOKYO, JAPAN © TOMY

### 保護者の方と一緒に読んでください。

この度は、タカラトミー「ぷにコミュ」をお買い上げいただきまして、誠にありがとうございます。ご使用前に、この取扱説明書をよくお読みください。

### 取扱説明書はこちらからもご覧いただけます。

- ※通送料などはお客様のご負担となります。
- ※WEBへの接続は保護者の方が行ってください。
- ※リンク先のホームページは、予告なく変更または削除する場合があります。  
[www.takaratomy.co.jp/support/manual/punicommu/](http://www.takaratomy.co.jp/support/manual/punicommu/)
- Scan this to get user manual! ●스캔해서 매뉴얼 보기!
- 請掃描此處獲取說明書！ ●請掃描此處獲取用戶使用說明書！



●たのしいタカラトミーの情報はインターネットで [www.takaratomy.co.jp](http://www.takaratomy.co.jp)  
**テスト用電池付 (LR-44型ボタン電池2個使用)**  
**WITH BATTERIES (2 LR44 BUTTON-TYPE INCLUDED)**

- ※付属の電池はテスト用です。
- ※写真、イラスト、ゲーム画面と実際の製品は、多少異なりますのでご了承ください。
- ※「ガチャ®」は株式会社タカラトミーアーツの登録商標です。
- ※画面のイメージは、ぷにコミュ ハローキティのぷにるんずです。

## 警告 (けいこく)

保護者の方へ 必ずお読みください。

- 小部品、小球があります。誤飲・窒息の危険がありますので3才未満のお子様には絶対に与えないでください。
- ボタン電池は飲み込むと危険です。お子様の手の届かない所に保管してください。万一飲み込んだ場合は、すぐに医師に相談してください。
- ボタン電池の交換は、保護者の方が行ってください。
- ご使用前に、取扱説明書をよくお読みください。また、読み終わった後は必ず保管してください。

## 注意 (ちゅうい)

- 歩きながらのご使用はおやめください。思わぬ事故の危険があります。
- 長時間続けての使用は避けて、適度に休息をお取りください。
- ボールチェーンは指に巻きついたりしないでください。血がかわなくなり危険です。
- 思わぬ事故の恐れがありますので、ご使用後は3才未満のお子様の手の届かないところに保管してください。
- 電池を誤使用すると発熱・破裂・液もれの恐れがあります。下記に注意してください。
- 古い電池と新しい電池、いろいろな種類の電池を混ぜて使わないでください。
- + (プラスマイナス) を正しくセットしてください。
- ショートさせたり充電、分解、加熱、火の中に入れてたりしないでください。
- 万一、電池からもれた液が目に入ったときはすぐに大量の水で洗い、医師に相談してください。皮膚や服についたときは水で洗ってください。
- 廃棄するときは、自治体の廃棄物処理の指示に従ってください。
- 電池を廃棄する場合は、テープなどで絶縁してください。
- ぶついたり、ふりまわすなど乱暴な遊びをしないでください。

### 〈使用上の注意〉

- 包装材は開封後、すぐに捨ててください。○消失したデータについては保証できません。
- 付属の電池はテスト用です。ご使用の際は、新しい電池と取り替えてください。
- 直射日光の当たる所、暖房器具の近くなど温度の高すぎる所、低すぎる所には置かないでください。
- 本機は非防水のため、絶対にぬらさないでください。
- 白黒液晶ディスプレイ
- 連続使用時間 新品のLR-44型ボタン電池で約5時間 ※使用状況によって異なります。


## セット内容

- 本体 … 1
- 取扱説明書 … 1

※セット内容がそろっているか最初に確認してください。  
※各製品ごとの取扱説明書が付属しています。

セット内容以外は入っていません。

## 1. 各部の名称

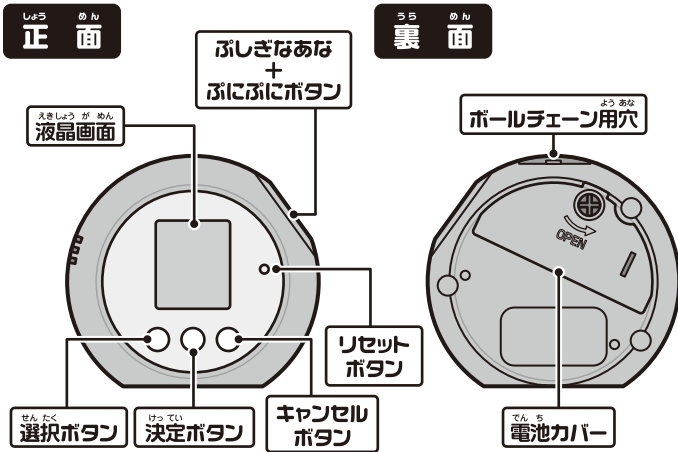

## パワーオン・パワーオフ

ぷにぷにボタンをぷにぷにに押すが、決定ボタンを約2秒間長押しすると、パワーオンになるよ。  
パワーオンの状態で、決定ボタンを約2秒間長押しすると、パワーオフになるよ。  
約1分間、ボタンが何も押されないと、自動的にパワーオフになるよ。

## 2. 初期設定


- 1 本体裏面の絶縁シートを抜いてね。
- 2 細い棒などでリセットボタンを軽く押してね。
- 3 現在の時間を「時」→「分」の順番に設定してね。  
選択ボタンを押すと表示時間が進むので現在の時間で決定ボタンを押してね。  
1つ前の選択に戻りたい時はキャンセルボタンを押してね。時間を設定できたら、  
☑ マークを選択ボタンで選んで、決定ボタンを押してね。  
「AM」は午前、「PM」は午後を意味するよ。



## 3. 電池の交換の仕方

電池残量が少なくなると、右の画面が表示されます。そのときは、必ず2個すべて新しいLR-44型ボタン電池に交換してください。  
※右の画面が表示された後は、時刻の再設定が必要ですが、保存されたデータは消えません。

- 1 本体裏面の電池カバーを開けてね。(プラスドライバーでネジをゆるめてね)
- 2 LR-44型ボタン電池2個の「プラス(+)」 「マイナス(-)」をよく確認して正しくセットしてね。
- 3 電池カバーを元に戻して、ネジをプラスドライバーでしっかりしめてね。
- 4 細い棒などでリセットボタンを軽く押してね。  
※リセットボタンを押すと、時刻の再設定が必要ですが、保存されたデータは消えません。

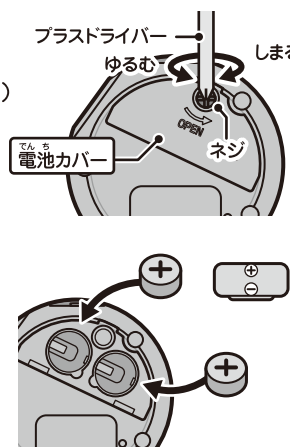

テープで電池を固定して、発熱・破裂の危険があります。ボタン電池の保管・破棄の際、テープなどを巻いて絶縁してください。

- 電池は新品のLR-44型ボタン電池をご使用ください。
- 電池交換は保護者の方が行ってください。

※画面のイメージは、ぶにコミュ ハローキティのぶにるんずです。


## 4. 基本の遊び方

メイン画面からキャンセルボタンを押すと設定した「時間」が表示されるよ。  
キャンセルボタンでメイン画面に戻るよ。  
決定ボタンで「ふれあいメニュー」が表示されるよ。選択ボタンで遊びたいモードを選んで、決定ボタンを押してね。モードは6種あるよ。  
「ふれあいメニュー」については、「5.ふれあいメニュー」を見てね。



### ぶにぶにボタンでぶにぶに!

メイン画面でぶにぶにボタンを押して、キャラクターをぶにぶににしてね。キャラクターがごきげんになるよ!  
ぶにぶにボタンは左右に押せるよ。左右交互にたくさんぶにぶにすると、ジャンプするよ。  
まんぷく度が低いとジャンプできないので、ごはんをあげてね。ぶにぶににすぎると、いやがる様子が見られるかも…!?

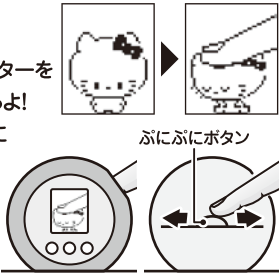

**注意** ●ぶにぶにボタンを強く押しすぎたり、引っ張らないでください。ボタンの外れや、破損の原因となります。●ぶしぎなあなにはまっすぐ指を入れ、指先を曲げたり捻じったりしないでください。(柔らかい素材なので表面に傷がつく場合があります。予めご了承ください。)

キャラクターを放っておくと、元気がなくなって、溶けちゃうことも…!?  
ぶにぶにボタンでぶにぶににして戻してあげよう!

### わくわくシーン

パワーオンになると、毎回さまざまな「わくわくシーン」がランダムで表示されるよ。  
推し度がたまると見られる「わくわくシーン」もあるかも…!?  
わくわくシーンは終了すると、自動でメイン画面に戻るよ。途中でキャンセルボタンを押して、メイン画面に戻ることもできるよ。

ぶに矢印が現れるときがあるよ。ぶにぶにボタンを押しみよう!



### ぶにガチャ

1日1回、遊ぶことができるよ!  
ぶにガチャが出てきたら、ぶにぶにボタンを押してね!

### さぶにやいず

ときどき、プレゼントボックスが出てくるよ!  
ぶにぶにボタンを押して、開けてみよう! 何かもらえるかも…!?


## 5. ふれあいメニュー

キャラクターがおやすみ中の時間 (PM9:00~AM6:59の間)は、「せつてい」以外では遊べません。

### ① ごはん

キャラクターにごはんをあげよう。  
選択ボタンであげたいごはんを選んで決定ボタンを押すと、ごはんが出てくるよ。ぶにぶにボタンを押して、ごはんをキャラクターの前に運んであげてね。

まんぷく度が低い時は、吹き出しに表示されたごはんをあげてみてね。

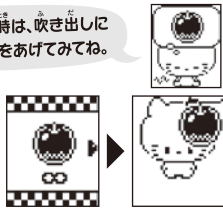

・りんごは、無限にあげることができます。  
・りんご以外のごはんは、「ぶにガチャ」や「さぶにやいず」でもらうことができます。

### ② おふろ


キャラクターをお風呂に入れてキレイにするよ。  
ぶにぶにボタンでメーターがいっぱいになるまでぶにぶににして、キャラクターをきれいにしよう! メイン画面で一定時間がたつと、キャラクターにホコリがつくので、お風呂に入れてあげてね。

### ③ ぶにゲーム

2つのミニゲームが楽しめるよ! 遊びたいゲームを選択ボタンで選んで決定ボタンを押してね。成功するとごはんがもらえるかも…!?

### ●ぶにっとなわとび

キャラクターを操作して、なわとびをしよう!  
ぶにぶにボタンを押して、キャラクターがなわに引っかからないようにジャンプさせてね。  
途中からなわの回るスピードが速くなるから要注意!

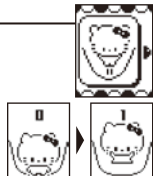

### ●ぶにっとなわとび

キャラクターを操作して、カップケーキを完成させよう! カップケーキが流れてくるので、ぶにぶにボタンで生クリームをトッピングしてね。  
タイミングよく生クリームがのるとカップケーキが完成するよ!

大きいカップはぶにぶにボタンを2回押せよう!!




### ④ クローゼット

クローゼットでは、キャラクターをおしゃれアイテムに着替えさせることができるよ。選択ボタンで着替えさせたいおしゃれアイテムを選択して、決定ボタンを押してね。メイン画面のキャラクターも着替えした状態になるよ。  
おしゃれアイテムは、「さぶにやいず」や推し度をためていくことでもらえるよ!

### ⑤ なかよしチェック

なかよしチェックでは、キャラクターの「推し度」と「まんぷく度」を確認できるよ。

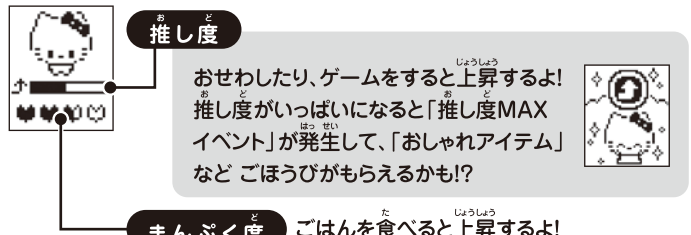

まんぷく度 ごはんを食べると上昇するよ!

### ⑥ せつてい

せつていでは、「じかん」「おんりょう」「オールリセット」ができるよ。  
選択ボタンで選んで、決定ボタンを押してね。


### ●じかん

「2.初期設定」で設定した時間を変更できるよ。  
時間は「2.初期設定」の③を見ながら設定してね。



### ●おんりょう

音の大きさを3段階で設定できるよ。  
選択ボタンで選んで、決定ボタンを押して設定してね。



### ●オールリセット

今まで遊んだデータをすべて消去して、購入時の状態に戻すよ。

- 右のオールリセットの実行画面が出たら、マークを選択ボタンで選んで、決定ボタンを押すと次の画面に進むよ。
- 矢印が選択ボタンとキャンセルボタンの上に表示されたら、選択ボタンとキャンセルボタンを同時に5秒間押し続けると、オールリセットが行われるよ。

オールリセットで一度消去したデータはもとに戻りません。本当に必要なとき以外は行わないでください。

## 6. こんなときは...

### ●パワーオンにならない

電池交換画面が出なくても、パワーオンできない場合があります。「3.電池の交換の仕方」を見ながら電池交換を行ってください。必ず全て新品のLR-44型ボタン電池を使い、いろいろな種類の電池を混ぜないようにしてください。

### ●画面が映らない、動かない、表示がおかしい

決定ボタンを3秒以上押し続けてください。それでも直らない場合は「3.電池の交換の仕方」の④の通りにリセットを行ってください。

※リセットボタンを押すと、時刻の再設定が必要ですが、保存されたデータは消えません。

タカラトミーグループ お客様相談室

0570-041031

電話受付時間 10~17時 月曜日~金曜日 (土日・祝日を除く)

本製品のお客サービスは日本国内での購入かつ日本国内からのお問い合わせに限りです。

(Customer service is only available in case this product purchased in Japan and inquired from Japan domestic.)

製品のお買い上げ時期によって、同一製品の中にも多少異なるものや、パッケージの写真やイラストと異なる場合がございます。ご了承ください。

製品につきましては、万全の注意を払って製造に当たっておりますが、万一お気付きの点などがございましたら、左記までご連絡ください。

株式会社 タカラトミー  
〒124-8511 東京都葛飾区立石 7-9-10

PuniCommu

...Punirunes...


Recommended for  
Ages 6 and up

Hello Kitty Punirunes

Cinnamoroll Punirunes

Kuromi Punirunes

Pompompurin Punirunes

**•Instruction Manual**© 2026 SANRIO CO., LTD. TOKYO, JAPAN ©  
© TOMY**Please read this with a parent or guardian.**

Thank you for purchasing "PuniCommu." Please read this instruction manual carefully before use.

**You can also view the instruction manual here.**

- ※Communication charges are the responsibility of the customer.
- ※Internet access must be supervised by a parent or guardian.
- ※The linked website is subject to change or removal without notice.

[www.takaratomy.co.jp/support/manual/punicommu/](http://www.takaratomy.co.jp/support/manual/punicommu/)


- Scan this to get user manual!
- 스캔해서 매뉴얼 보기!
- 請掃描此處獲取說明書!
- 請掃描此處獲取用戶使用說明書!



- Get the latest news on Takara Tomy products online [www.takaratomy.co.jp](http://www.takaratomy.co.jp)

**WITH BATTERIES****(2 LR44 BUTTON-TYPE INCLUDED)**

- ※The included batteries are for testing purposes only.
- ※Please note that the actual product may differ slightly from the photos, illustrations, and in-game screenshots.
- ※"Gacha" is a registered trademark of Takara Tomy Arts Co., Ltd.
- ※The image on the screen shows PuniCommu Hello Kitty Punirunes.

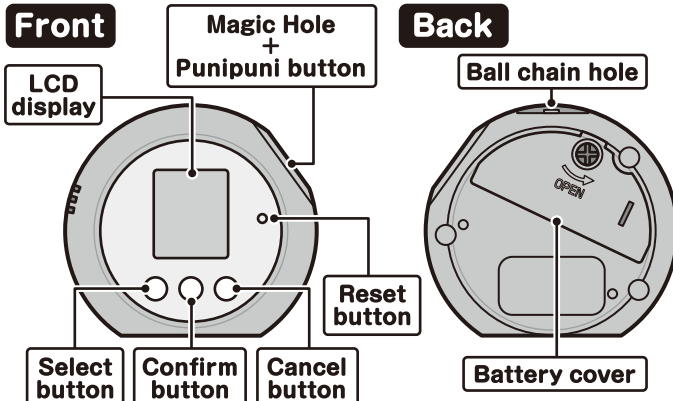**1. Names of Parts****How to Turn the Power ON/OFF**

To turn on, push the Punipuni button or press and hold down the Select button for about 2 seconds.

To turn off, press and hold the Select button for about 2 seconds while powered on.

If no buttons are pressed for about 1 minute, the power will automatically turn off.

**2. Initial Setup**

- 1 Remove the insulation sheet from the back of the unit.
- 2 Gently press the Reset button with a thin object.
- 3 Set the current time in the order of hours → minutes.



Press the Select button to advance the displayed time, then press the Confirm button when the correct time is set. To return to the previous selection, press the Cancel button.


Once you have set the time, select the  mark using the Select button and press the Confirm button. "AM" means before noon and "PM" means after noon.**3. How to Replace the Batteries**

When the battery power is low, the screen on the right will be displayed. When this occurs, be sure to replace both batteries with new LR44 button-type batteries.



※After the screen on the right is displayed, you will need to reset the time, but your saved data will not be lost.

- 1 Remove the battery cover on the back of the unit. (Use a Phillips screwdriver to loosen the screw.)
- 2 Carefully check the positive (+) and negative (-) terminals of the two LR44 button-type batteries and insert them correctly.
- 3 Return the battery cover and use the Phillips screwdriver to tighten the screw securely.
- 4 Gently press the Reset button with a thin object.

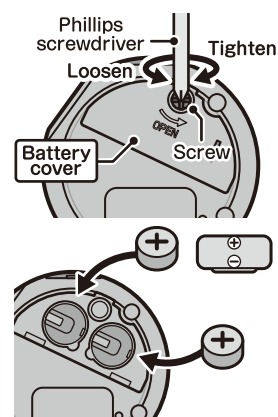


※Pressing the Reset button will require you to reset the time, but your saved data will not be lost.

**Contents**

- PuniCommu x 1
- Instruction Manual x 1

Only the listed items are included.

- ※Make sure that the set is complete.
- ※Each product comes with an instruction manual.



There is a risk of overheating and rupture. When storing or disposing of button-type batteries, insulate them by wrapping them in tape or similar.




- Please use only new LR44 button-type batteries.
- Batteries should be replaced by a parent or guardian.

※The image on the screen shows PuniCommu Hello Kitty Punirunes.

## 4. Basic Gameplay


When you press the Cancel button on the main screen, the set time will be displayed. Press the Cancel button again to return to the main screen. Press the Select button to display the "Interaction Menu." Select the mode you want to play using the Select button and press the Confirm button. Six modes are available. For details on the "Interaction Menu," please see "5. Interaction Menu."

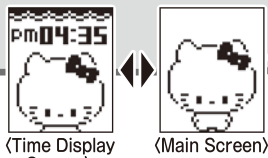

### Get squishy with the Punipuni button!

Give your Punirune a little squish to make it happy! It's easy—just push the Punipuni button on the main screen! Alternate left and right to give more squishes—it'll jump for joy! Careful, though—one too many, and it might get annoyed!

Pro tip: Remember to feed your Punirune! They can't jump if their "Satisfaction Level" is low.

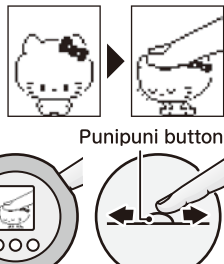

**Caution** Insert your finger gently in the Magic Hole. Be careful not to bend or twist your fingertip. (This may cause scratches on the surface of the soft material.)

If you don't play with your Punirune, it might get sad and melt away! Give it a little squish with the Punipuni button to bring it back to life!

### Exciting Scenes

Every time you turn on the power, an "Exciting Scene" will play randomly. As your Reputation Level increases, you'll unlock new scenes! Once an Exciting Scene ends, you'll automatically return to the main screen. You can also press the Cancel button at any time to return to the main screen.

Sometimes a Puni arrow will appear. That's your cue to push the Punipuni button >



### PuniGacha

You can play once a day! When the Puni Gacha appears, push the Punipuni button!

### PuniPresents

Sometimes a gift box will appear! Push the Punipuni button to open it! You might get a surprise!

## 5. Interaction Menu


**Caution** You cannot play with your Punirune while it is sleeping (9:00 PM to 6:59 AM). You can only access the settings during this rest period.

### 1 Food

Feed your Punirune!

Select the food you want to give using the Select button and press the Confirm button to serve it. Push the Punipuni button to bring the food in front of your Punirune.

If its Satisfaction Level is low, try feeding it the food shown in the speech bubble.

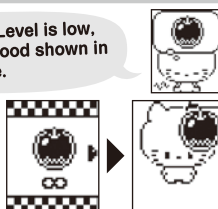

**Caution** Apples are unlimited and can be given at any time. Food other than Apples can be obtained from "Puni Gacha" or "Puni Presents."

### 2 Bath Time

Give your Punirune a bath!

Push the Punipuni button until the meter fills up to make everything clean! After a certain amount of time passes on the main screen, your Punirune will get dusty again, so be sure to give it another bath.




### 3 PuniGames

There are two minigames you can play > Select the one you want to play using the Select button and press the Confirm button. If you win, you might get food!

### Jump Rope

Control of your Punirune and jump rope! Push the Punipuni button to make your Punirune jump without getting caught in the rope. Watch out—the rope starts spinning faster and faster!

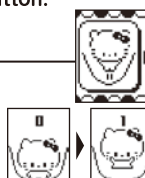

### Whipped Cream

Control your Punirune and make cupcakes!

Fresh cupcakes incoming!

Top them with whipped cream using the Punipuni button as they pass by. Time it right to make the perfect cupcakes!

For the large cupcakes, push the Punipuni button twice!



### 4 Closet

You can use the Closet to change the appearance of your Punirune by equipping fashion accessories.

Select the accessory you want using the Select button and press the Confirm button to equip it. The change will be reflected on your Punirune on the main screen. You can obtain accessories from "Puni Presents" or by increasing your "Reputation Level."



### 5 Friendship Check

You can use the Friendship Check to view your Punirune's "Reputation Level" and "Satisfaction Level."

#### Reputation Level

Increases when you take care of and play games with your Punirune! When your Reputation Level is full, a "Reputation Level MAX Event" will trigger, and you might get rewards like "Fashion Accessories!"



#### Satisfaction Level

Increases when your Punirune eats!

### 6 Settings

In the settings, you can access "Time," "Volume," and "Reset All." Select the item you want using the Select button and press the Confirm button.

#### Time

You can change the time set in "2. Initial Setup." Please set the time by following the instructions in step ③.



#### Volume

You can set the volume to one of three levels. Select a level using the Select button and press the Confirm button to set it.



#### Reset All

This will delete all your saved data and restore the device to its factory settings.

- When the Reset All screen on the right appears, select the  mark using the Select button and press the Confirm button to proceed to the next screen.
- When arrows appear above the Select and Cancel buttons, press and hold both buttons simultaneously for 5 seconds to perform the reset.



**Caution** Data erased by the reset cannot be recovered. Do not perform Reset All unless absolutely necessary.

## 6. Troubleshooting

### The power won't turn on

Even if the battery replacement warning does not appear, the power may still not turn on. Please replace the batteries by following the instructions in "3. How to Replace the Batteries." Always use new LR44 button-type batteries. Do not mix different types of batteries.

### The screen is blank, unresponsive, or displaying incorrectly

Press and hold the Confirm button for at least 3 seconds. If the issue persists, perform a reset as described in step ④ in "3. How to Replace the Batteries."

※Pressing the Reset button will require you to reset the time, but your saved data will not be lost.

タカラトミーグループ お客様相談室

0570-041031

電話受付時間 10～17時 月曜日～金曜日(土日・祝日を除く)  
本製品のお客様サポートは日本国内での購入  
かつ日本国内からのお問い合わせに限りです。

(Customer service is only available in case this product  
purchased in Japan and inquired from Japan domestic.)

製品のお買い上げ時期によって、同一製品の中にも多少異なるものや、  
パッケージの写真やイラストと異なる場合がございますがご了承ください。  
製品につきましては、万全の注意を払って製造に当たっておりますが、  
万一お気付きの点などがございましたら、左記までご連絡ください。

株式会社 タカラトミー  
〒124-8511 東京都葛飾区立石 7-9-10