

JESSIE

THE YODELING COWGIRL

TALKING FIGURE COLLECTOR'S EDITION

55+
PHRASES!

Pull string to hear catchphrases
from the movie!

A chance to make kids happy again.

Why didn't you say so? Let's go!

Yeehaw! I'm so happy to see you!

And more!



PLAY INSTRUCTIONS:


How To Play with Jessie!

Pull string on Jessie's back to hear her signature
cowgirl phrases from the movie.

背中（せなか）のヒモ（ひも）をひっぱってみてね！
55種（しゅ）以上のセリフ（せりふ）をしゃべるよ！
日本語（にほんご）と英語（えいご）でおしゃべりするよ！



なまえシール入り
Name sticker included

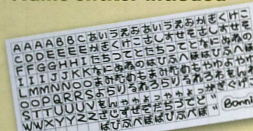


※写真（しやうしん）やイラスト（いらすと）は商品（しやうひん）と異なる場合（ばい）がございます。ご了承ください。（よろしく）

リアルサイズトーキングフィギュア ジェシー Real Size Talking Figure Jessie

電源スイッチの入れ方

How to Turn On Power Switch

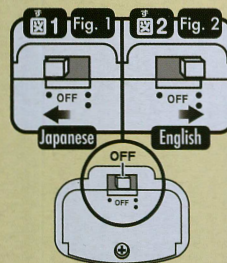

日本語モード

※図1の様に、スイッチを切り替えて、背中のトークスイッチをひっぱると日本語でおしゃべりします。

英語モード

※図2の様に、スイッチを切り替えて、背中のトークスイッチをひっぱると英語でおしゃべりします。

Japanese Mode


As shown in Fig. 1, flip the switch and pull the Talk Switch on the back to enable Japanese Mode.

English Mode

As shown in Fig. 2, flip the switch and pull the Talk Switch on the back to enable English Mode.

電池交換のしかた 単4形アルカリ乾電池3本が必要です。

How to Replace the Batteries Requires 3 AAA alkaline batteries.

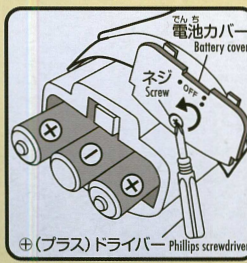

⊕ (プラス) ドライバー Phillips screwdriver

電池は別売です。
Batteries not included.

※自立・ポーズの固定は
できません。

* Cannot stand on its
own or hold a pose.

※付属の電池はテスト用です。開封後はスイッチをオフにしたあと、全て新しい電池に交換してください。ジェシーの背中の面ファスナーをはがすと、電池ケースが現れます。背中から少し引き出してください。⊕ドライバーでネジをゆるめ、電池カバーを外します。左の図のように、⊕ (プラス) ⊖ (マイナス) を間違えないように正しくセットしてください。セットした後、電池カバーをドライバーでしっかりと留めてください。※充電電池は使用しないでください。

*The included batteries are for testing purposes only. After opening the package, turn off the switch and replace all the batteries with new ones. Remove the fastener on Jessie's back to reveal the battery compartment. Pull it out slightly from the back.

Loosen the screw on the battery cover with a Phillips head screwdriver and remove it. Remove the old batteries and insert the new batteries correctly, making sure to match the + (positive) and - (negative) terminals, as shown in the left figure. After inserting the batteries, securely fasten the battery cover with the screwdriver.

*Do not use rechargeable batteries.

205020

